



See Talk  
DHS1V1

**User Manual**

[www.seetalk.com.tr](http://www.seetalk.com.tr)



**Dear Customer;**

Thank you for choosing this product. Before operating your device please read the user manual carefully and keep it as you may need it later.

**Important Safety Alerts;**

This product has been designed for indoor use.

- Do not keep your product at very high or very low temperatures.
- Do not expose your product to direct sunlight for a long time.
- Never use a damaged adapter or USB cable.
- Do not use cleaning materials that contain abrasive materials to clean your product.
- Clean your product only with a dry cloth.
- Do not use this product near water. Do not spill liquid of any kind on the product.
- Do not expose your product to dripping or splashing water.
- Do not keep your product in humid or dusty places.
- Do not expose your product to sunlight, fire or similar environments. Protect it from high temperature.
- Use only accessories approved by the manufacturer.
- Do not drop your product or expose it to impact in any other way.
- Do not attempt to disassemble, repair, adjust or change your product. Please contact the authorized service in case of malfunction.

**When the Product Is Warm While Charging;**

- While being charged, the product and adapter may become hot. This does not affect the device's lifespan or its performance and the device's normal operating range.

In case of heating of the device, remove the adapter and USB cable from the device and turn off the device.

- Let the device cool down and start charging again.
- Overheating of the lower part of the device may be due to the damaged USB cable. If the connected USB cable is damaged, replace it with a new cable.

### **When the product gets warm;**

- When you run your product for a long time, your device may get warm because of temporarily increased battery consumption. Close all running applications and do not use the device for a while.
- If the device overheats for a long time, do not use it for a while. If the device continues to overheat, contact the authorized service.

ⓘ **Note:** Internet connection is required during the first installation of the device.

ⓘ **Note:** Charge the battery before each use of the product.

### **Charging the Product**

- When the battery is low, the battery icon appears blank.
- If the battery is completely discharged, the device cannot be turned on immediately when the charger is connected to the product. Without turning on the device let the discharged battery charge for a few minutes first.
- Using a power source other than the charger, such as a computer, low electrical current slower charging due to low electrical current.
- The device can be used while charging, but in this case, it may take longer to fully charge the battery.

### **To charge the product;**

- Connect the included USB cable to the power adapter.
- Connect the USB cable to the Micro USB port of the device.
- Plug the power adapter into a power outlet.

### **Turning the Product On or Off**

To turn on the device, long press the On-Off button on the right side of the device for a few seconds. When the device is turned on, the screen and the led light will turn on.

To turn off the device, long press the on-off button for a few seconds.

ⓘ **Note:** After 90 minutes of inactivity on the device it will shut down automatically for longer battery use.

## Using the Microphone

The microphone function of the device works only on the content reading screen and the main screen. In order to use the device as a microphone, the device screen must be open. The device is turned on with the microphone muted. After connecting the device to the sound system, you can switch the microphone on by pressing the volume on / off button in the middle and you can adjust the volume by using the volume on / off buttons on the device.




## Using the Product

After the device is turned on, the main screen appears. Personally uploaded data appear as folders and contents on the Home screen.


## Settings

Settings can be accessed by touching the  button on the main screen.

## Personal Content


When the  button on the main screen is touched, the personal contents tab is entered. All created personal content is displayed on this screen.


**Note:** How to add personal contents will be shown in the usage section of the panel.

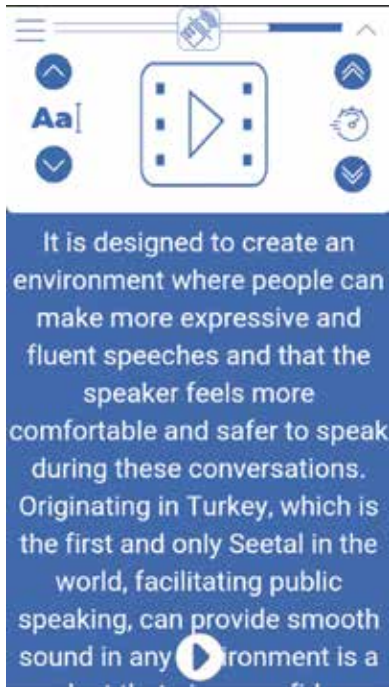

### Reading Content


Located at the bottom,

 When you tap the button, the content starts streaming.

 When you tap the button, the play function will be paused.

Text play and pause functions are also working with the button on the remote control which is supplied with the device.


Located at the top right,

 When you tap the button, the text settings panel opens.

Settings made from this menu are instantly saved and the last the setting is always functional.

The menu is closed automatically as soon as the khutbah is being played.

On the left in the text settings panel,

 You can increase the font size with the button.

 You can reduce the font size with the button.


Clicking on the  button will open a panel where you can choose the font and colors.

You can update the reading area by touching the font and color format of your choice.

After selecting the option you want on the panel,

 You can close the panel by tapping the button.

 With the button you can increase the text flow rate.

 With the button you can reduce the text flow rate.

All settings made from the text settings panel are permanent. The last you do until you change it settings remain saved.

By touching the font and color format of your choice you can update the reading field.

You can choose the option you want on the panel.

### **Prompter Options**

- When the Highlight button is clicked, the places in the scrolling text are scanned.
- When the highlight button is not clicked, the scrolling text will not be scanned.
- When you pull the switch on the highlight button to the right, you can proceed to reading page by page.

### **How to use controller:**

The controller of your device, goes sleep state in case of you dont press any button on it for 10 minutes for battery saving.

Then, when you press any button, it reconnects automatically. You can understand the current state of the controller by viewing at the led light on the controller, it flashes one time if its currently connected, and flashes three times if its not connected. If its not connected, you should try pair it with your device.

### **Controller Pairing:**

At the Settings section, touch the system settings/controller settings option and follow the instructions on that screen.

## **Content Update**

Content update control is carried out in three ways;

- If there is a wireless internet network around when the device is turned on for the first time,
- When the device is awakened by pressing the button on the right side of the device, if there is a previously connected internet network,
- When the "Update Content" option is tapped in the settings section of the device, an update is performed.

When all this is done, if there is updated content, "New Content Found " warning is displayed. If there is no new content, the warning "No New Content found" is displayed.

The device must be connected to the internet in order to control the content.

## **Wireless Networks**

Tap on the network you want to connect to and enter the network password. No need to enter password again after connecting to a network once. Tap on the network and just clicking the connect button is enough to connect. If the network password has been changed, tap on the relevant network and select "Forget Connection" then add the network again with the new password.

## **User Guide**

System usage is taught digitally with visual details.

## **System Update**

Device does the update check as well, during content control as khutbah etc.

If increasing the software version inside the device is needed, it asks for confirmation from the user to be installed and download this software.

In order for the update to be downloaded, the charge level must be over 60%.

Also, the download process via wireless network connection instead of mobile phone connection (hotspot) is recommended. Please make sure that the device is connected to the charger unit until download and installation process is completed.

## **Feedback**

In this option, Complaints - Suggestions and Requests can be entered, as well as National service network communication and the device identification number is found. Service operations managed through device identification number.

## **Using Remote Control**

The remote control that comes with the device is already matched with the device when you get it. But when a malfunction is occurred with this remote, new remote must be matched by the user. To match the remote with the device go to Settings / System Settings / Control Settings and enter and follow the instructions that appear on the screen.

## **Panel Usage**

By entering the address x.seetalk.com.tr, you can register your device in the system and upload the texts to your device. You will register to the system with the last 6 digits of the number written on the label on your device and determine your own password.

**Device Serial No:** 002410

**Password:** 002410

After logging in with your last 6 numbers on the label, the registration screen will open.

## **System Registration**

You can complete your registration to the system by entering your personal information. You will receive a verification code on your phone.

## **Category Operations**

After clicking on the category settings, you can create a new category, delete it and change its name with the screen that opens on the right.



## Adding Content

With the new content button, you can write the content you want to upload manually or drag and drop your file “.docx” to the system. With the preview button, you can see how your text will appear on the device as on the left side of the screen, and you can do the operations you have done on the device here. After selecting the folder you want to upload the content to in the upper right corner, you can finish the process by pressing the save button. When you click the “Update Content” button on the device, the new content you added will be uploaded to your device.



You can visit our page for more detailed information.  
[www.seetalk.com.tr/kullanim-kilavuzu](http://www.seetalk.com.tr/kullanim-kilavuzu)



Complies with WEEE Regulation.  
WEEE

This device should not be disposed of with household waste, being formed of recycled materials in accordance with the WEEE directive. Please return the appliance to the nearest collection center to have this appliance recycled.

## MANUFACTURER COMPANY

Akıllı Mikrofon Teknolojileri San.Tic. A.Ş.

Zafer Mah. 177. Sk. No:2 Jumbo Apt. Esenyurt / İstanbul

Tel: +90 212 412 14 64 Fax: +90 212 412 14 65





**See Talk  
DHS1V1**

**User Manual**

[www.seetalk.com.tr](http://www.seetalk.com.tr)

